


Nera WorldCommunicator - Quickstart

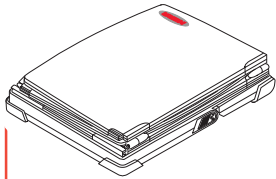

Setting up

1 Open the WorldCommunicator by swinging down the **Modem Unit**.

2 Unfold the antenna. Use **storm locks** if necessary.

3 Press and hold **OK** for 2 secs.


4 PIN code: use multi-buttons as indicated (default code: 1 2 3 4).

5 Check antenna cable connections.

6 The four satellites are positioned stationary above **equator**, see map in "Getting Started" or on CD.

Aim the antenna towards the estimated position of the satellite, or make a slow scan across the hemisphere with the vertical angles 60°, 30° or 0° as indicated. If necessary, use the **compass**.

Free line of sight to the satellite is required.


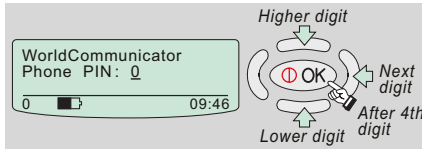


7 The shaded signal strength bar appearing in the display increases in length when closing in on the satellite.

The signal strength should be at least 535 for 64 kbps communication.

8 Press **OK** to accept the Ocean Region satellite.

If no spot beam is found from the current satellite, try another Ocean Region.

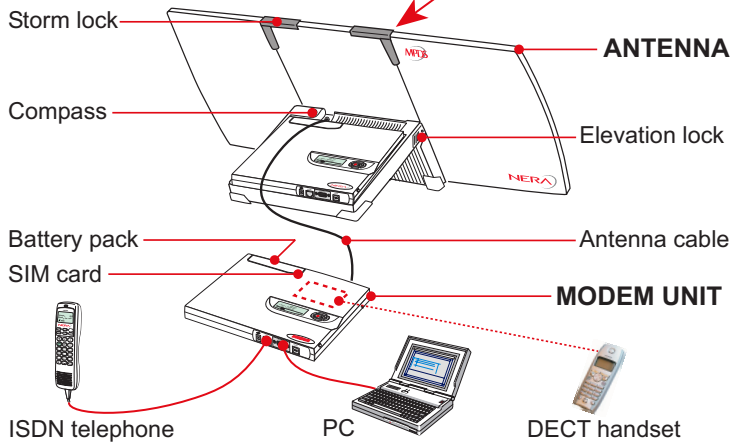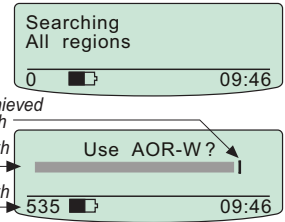

Nera WorldCommunicator - Quickstart CONT'D



Note! Default Net service provider must be programmed the first time an Ocean Region is entered:

- Press **OK** to open the **MENU**. Scroll down to **Set Default Net** and press **OK**.
- Press **OK** at required provider. When using a SIM card, the Net service provider is preset.

```
Telenor (001)
AOR-E
Ready for call
630 [ ] 09
```

```
MENU
> Set Default Net.
↓ Configure DTE
520 [ ] 09:46
```

ISDN telephone:

9 Connect the ISDN telephone and verify that you have a dial tone. *If no MSN number is configured, 4.8 kbps speech quality is automatically chosen. High quality 64 kbps speech service is selected via Menu >Active MSN in the Nera ISDN Handset (see Getting Started.)*

DECT handset registration:

10 Press **OK** on the WorldCommunicator to enter the **MENU**. Select **Device Manager>Add device>DECT>Speech**, and enter **Owner's password** before pressing **OK**. **Open to register** appears in the display.

- Press **ON** to switch ON the DECT handset.
- **Open** the menu. Scroll down:
- **Settings** **OK** select and confirm.
- **Register H/Set** **OK** select and confirm.
- **Base 1** **OK** select base station (1 - 4).

```
Device Manager
> Add device
↓ Remove device
535 [ ] 09:46
```

- **OK** Enter the WorldCommunicator **base station pass word: 1 2 3 4**, and confirm
- Press **OK** when **REGISTERED** appears in the WorldCommunicator display.

Making a call:

11 Dial 00, country code and subscriber number . Press **#** to send the number, e.g.:

00 4767244700 # On DECT also:

Data setup:

Use the Windows dial-up networking to programme the server telephone number.

Make sure to use the correct modem driver.

Note! Some Net providers offer free e-mail and internet access by dialing 28#.

Dialing a mobile ISDN compatible server:

Connect the computer to the ISDN/RS-232 or USB port. Use the following modem drivers:

- **ISDN**, use a driver matching your PCMCIA/PCI card.
- **RS-232**, use a 33.600 bps driver in Windows.
- **USB**, on computer use the Nera WorldCommunicator USB modem driver (found on the CD).
On a Mac computer, use Metric Ricochet Wireless.

*Dialing MPDS is only possible via RS-232 and USB. Dial number **94#. See detailed regarding use of applications on the Nera WorldCommunicator CD.*