



Short Notes: Making calls to and from an Iridium handset

- **Making a call from a landline phone in the United States terminating to an Iridium satellite phone** (regardless of the location of the satellite phone, dialing is the same).
From the landline phone, dial: 011 8816 XXX XXXXX
(011, International Direct Dial (IDD) access code for United States; 8816 XXX XXXXX, the MSISDN for the Iridium unit).
- **Making a call from a landline phone outside of the United States terminating to an Iridium satellite phone.** From the landline phone, dial: ## 8816 XXX XXXXX
(##, International Direct Dial (IDD) access code for the country from which you are calling; 8816 XXX XXXXX, the MSISDN).
- **Making a call from the Iridium satellite phone** (regardless of the location of the satellite phone) **to a landline phone located in the United States.**
From the satellite phone, dial: 00 1 972-XXX-XXXX
(00, for all outbound calls from the satellite phone; 1, United States country code; 972, area code; XXX-XXXX, actual phone number).
- **Making a call from the Iridium satellite phone** (regardless of the location of the satellite phone) **to a landline phone located in another country.**
From the satellite phone, dial: 00 CC XXXXXX
(00, for all outbound calls from satellite phone; CC, country code; XXXXXX, actual number).

- Additional notes:
 - It is not always possible to call an Iridium telephone from every PSTN around the world. Some telecommunication companies have not yet enabled their gateways to accommodate Iridium services.
 - Iridium to Iridium calls will always be dialed in the following format: 00 8816 XXXXXXXX
 - Iridium to GSM telephone calls should be made as follows: dial the international country code (CC) from the GSM phone's country of origin followed by the mobile number, ensuring that the 0 at the beginning of the mobile number is NOT included.